

## Caddon Hives Ltd

Caddon Lynns, Caddon Foot Rd, Clovenfords, Galashiels, Scotland, TD1 3LY Tel: 01896 850 755 Email: caddon\_hives@yahoo.co.uk


## **National Gabled Roof Assembly Instructions**

Use outdoor wood glue (not supplied) at every joint for an even stronger, long lasting joint.

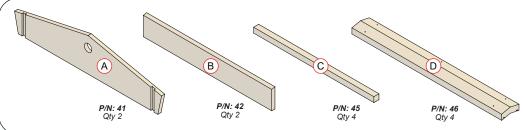


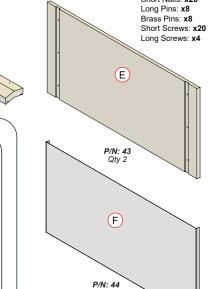


Short Nails: x26

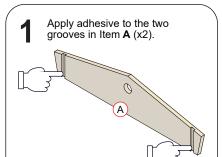


Insert Item B (x2) into the slots on Item A (x2) and secure with 8 long pins.
Ensure bottom is flush.

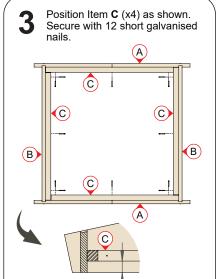


Remove Item F (x2) from Item E (x2).
Apply adhesive along the top edges of Items
A (x2) and B (x2). Place Item E onto the
frame, locating Item A into the slots on Item
E. Secure with 12 short screws through Item
E into Item A. Add more screws if desired.

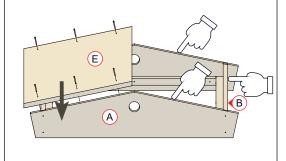

Place Item **F** (x2) onto Item **E** (x2) and secure around **edge** with 14 short galvanised nails.

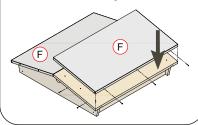

Secure conical wasp traps (x2) with 8 brass pins onto the outside of Item A (x2) over the holes.

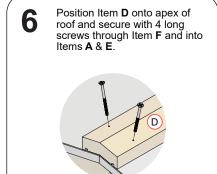

40

7 Insert 2 short screws through Item F and into Item E.

© Copyright Caddon Hives Ltd

